



1. 2"x10" Blocking in-between the Framing for Backing.
2. (3) 2"x4"s for the Threshold (flat side down)
3. Shower Stall must be Clean, from Dirt * Oil
4. DO NOT USE PRESSURE TREATED WOOD
5. Drain MUST BE there - But does not need to be connected •
(use a 3-Part PVC Flange Type Drain). TOP must be there
6. Cement Surface must be BONE Dry in order to do job
7. There can be no water in pan prior to install.
8. All prep work must be« done prior to Installation of the Fiberglass.

9. Fiberglass Is NOT the finished Product!!
You must Tile over the Fiberglass.
10. Pan is guaranteed until Tile Is put down. You must do a water test after pan is dry/cured (24-48 hrs afterward) ALL WORK IS C.Q.D. NO EXCEPTIONS!!!!

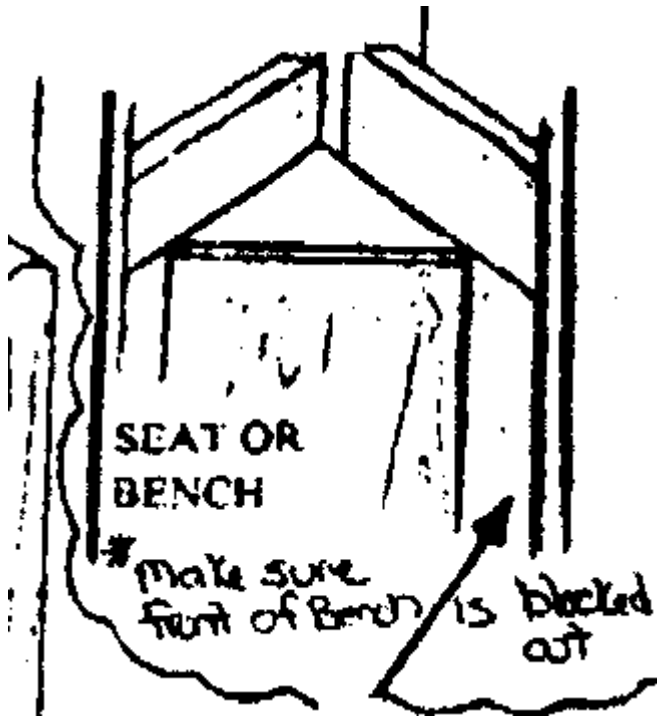

PREPARATION SHEET



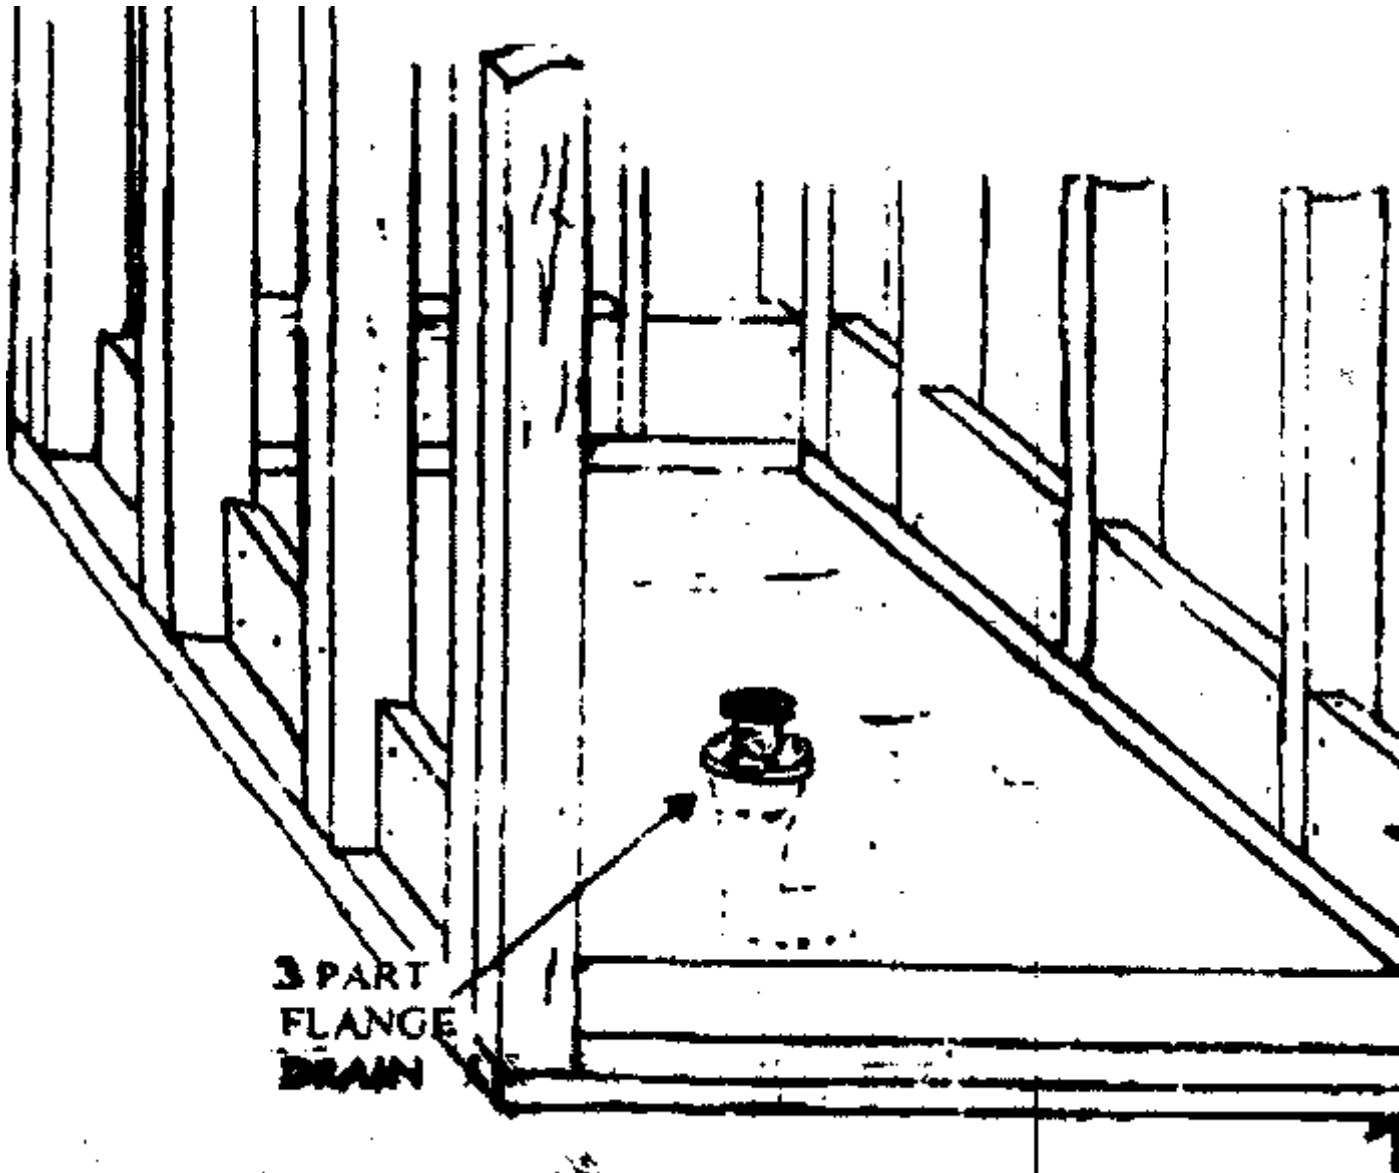

**3 PART
FLANGE
DRAIN**

**DRFIBERGLASS.COM #973-455-8804 FAX #732-
929-9260**

2"X10" BLOCKS
BETWEEN FRAMING
FLUSH WITH INSIDE.